


7.9\*9.5cm

Product instructions:

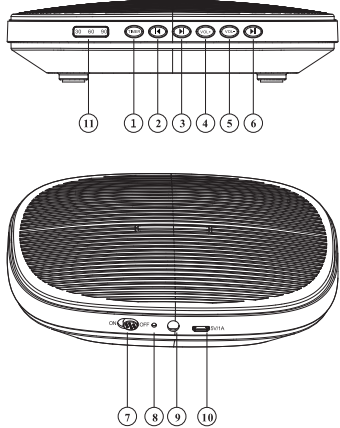

2

- |                |                   |
|----------------|-------------------|
| ① Timer button | ⑦ ON/OFF          |
| ② Previous     | ⑧ Power indicator |
| ③ Next         | ⑨ Earphone jack   |
| ④ Volume up    | ⑩ USB port        |
| ⑤ Volume down  | ⑪ Timer indicator |
| ⑥ Play/Pause   |                   |

Product Features:

- Built-in 20 soothing sound(lullaby 3, white noise, pink noise, gray noise, brown noise, fan, craking fire, clock ticking,train,crickets,frogs,birds, rain,thunderstorm, stream,ocean,shush,Womb sound, lullaby 1, lullaby 2);
- Support earphone listening;
- Timer function for 20 soothing sound;
- Powered by AC adapter or built-in battery;

Accessories

- Usb cable\*1
- User Manual\*1

3

Product Parameters:

Working voltage: 3.7V (1800 mA rechargeable lithium battery )  
 Dynamic current≤200mA  
 Quiescent current 20UA  
 Product size:152 x 149 x 37 mm  
 Speaker : Diameter 66 mm, 4Ω3W  
 Power Supply: Input AC100-240V、50/60HZ; Output DC 5V,1A

Instructions manual:

- There are 20 built-in soothing sound in the sleep sound therapy machine. Slide the switch to ON, it will play the music before power off automatically, press ⑥ button to "Pause/play" the current playing sound, use ②, ③ buttons to change the previous track or the next track.
- There are 7 volume level, the default volume level is the last but one small level, press the④,⑤buttons to adjust volume up or down while it is playing sound.
- You can enjoy the soothing sound alone after plug the earphone in the 3.5mm earphone jack.
- Timer function

4

The default mode is infinite loop play, after activate the timer buttons, it will be:

- LED 1 light up, countdown for 30 minutes playing,
- LED 2 light up, countdown for 60 minutes playing,
- LED 3 light up, countdown for 90 minutes playing,
- No LED light up, that will be regular play mode(not controlled by time, play the present music in loop always), the default is infinite loop play mode,

After activating the timer button, time end, sound stop and Led light off, then keep sleep mode;press the⑥button to wake up and play the soothing sound again, infinite loop for the soothing sound before stopping; it need to press the①to activate timer function again.

- Charging for battery: After connection the power adapter,it is starting to charging for lithium battery, red light means charging, green light means finish charging, the charging time should be around 3 hours without working.

Users attentions

- There is no sound after power on, please check if low battery and connect to the power supply to try again;

5

- It can't be charge, please connect power supply and check the indication light is working or not,red light means charging, green light means finish charging;

Notes

- Please don't disassemble or repair product, in case to damage product;
- Please keep them away from water,in case flooding to avoid damage product;
- Please keep them away from high temperature, fire resourse;
- Please don't use corrosive detergent to wipe or clean product;
- Please wipe the surface with a soft wet cloth towel;

After service guarantee


If the product with trouble, please contact with the seller.

- One year warranty ;
- The warranty time is based on the invoice date;
- Any of the following situation, not covered by the warranty:
  - Damaged by improper operation, storage or maintenancfrom customer;
  - Invoice model does not match to product model or invoice was altered;
  - Invalid invoice;
  - Damaged by force majeure
- Products not covered by our warranty, our customer service center will be pleasure to serve you faithfully too;
- Email:support@sinocare.com

6

Sinocare

Sleep Sound Machine  
 “White Noise Mahine”  
 User Manual

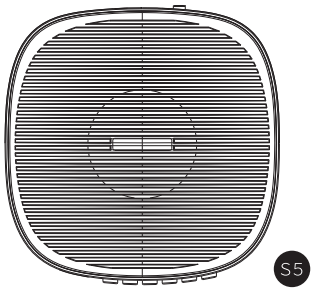

Thank you for using our product, please read carefully before power on